

## AirSafe™ Kit Installation Instructions

### 99-07 Silverado Factory Crossmember and Lower Control Arms

\*Some fabrication may be required

1. Air up the truck, jack up the front and safely support it with jack stands. Or jack up one side at a time.
2. Remove front wheels.
3. If installed, remove factory bump stops from frame.
4. Install AirSafe kit bracket in factory bump stop hole and mark placement for second hole. Drill hole for second bolt. (Fig. 1) Install Airsafe™ kit bracket with taller side of bump stop mount up. (Fig. 2)
5. Tighten bolts while holding bracket against bump stop mount. (Fig 3.)
6. Install Modular Bump Stop provided and ensure it lines up directly over the lower control arm. Reinstall all components and check clearances.
7. Reinstall wheels and check to make sure bump stop is long enough to keep truck components off the ground. If not, contact RSR. Air up and down and check all clearances again.



Fig 1.

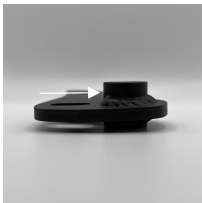


Fig 2.



Fig 3.