

AirSafe™ Kit Installation Instructions

63-87 C10 Truck with Factory Crossmember and Porterbuilt Narrowed/Forward Control Arms

**Some fabrication may be required*

1. Air up the truck, jack up the front and safely support it with jack stands. Or jack up one side at a time.
2. Remove front wheels. (Or work one side at a time.) *Note* If your truck has an anti-roll bar, it may interfere with this kit. Check before continuing.*
3. Remove the front outer upper bag mount bolt. (Fig. 1.)
4. Install Airsafe™ kit bracket on front side of crossmember with hole on bracket closest to the bump mount in the bolt hole that was removed. (Fig 2.) Mark second bracket hole in crossmember, remove and drill hole. *Some suspension components may have to be removed to drill.*
5. Install bracket through new hole first with taller side of bump stop mount up. (Fig 3.), then line up and install front bolt, with bolt threads facing up. Push bracket toward bag mount so the bump stop mount is touching the crossmember/upper bag mount.
6. Install Modular Bump Stop provided and ensure it lines up directly over the top of the lower control arm bar (Fig 2). Reinstall all components and check clearances.
7. Reinstall wheels and check to make sure bump stop is long enough to keep truck components off the ground. If not, contact RSR. Air up and down and check all clearances again.



Fig 1.



Fig 2.

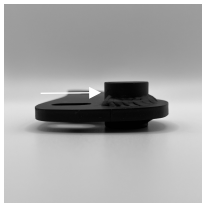


Fig 3.